 


Samsung Galaxy Express™ Quick start guide

Get to know your phone

Unlocking your phone

 
1. Press the power/lock key on top of the phone.
2. Swipe the screen.

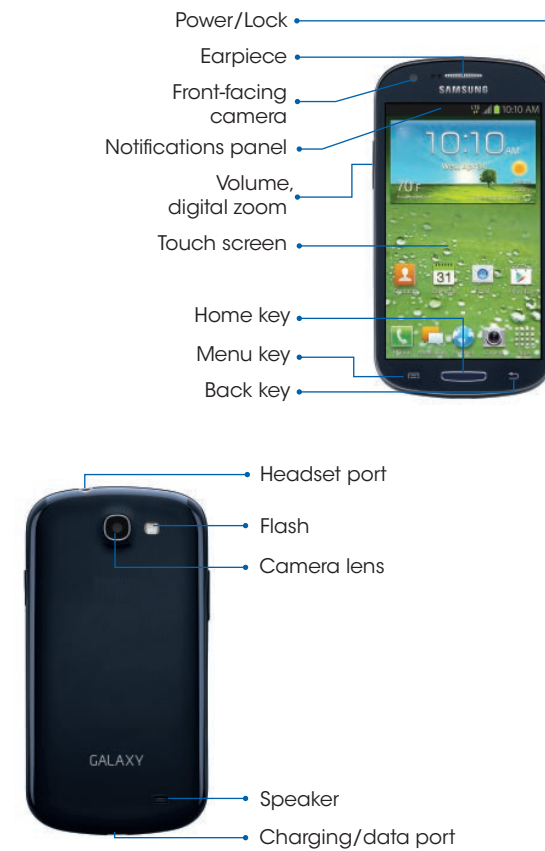

Phone setup

Inserting the battery and SIM card

1. Remove back cover.
2. Insert microSIM with gold-colored contacts facing down.
3. Insert microSD™ card (not included) with gold-colored contacts facing down.
4. Insert battery making sure the connectors align.
5. Replace back cover and charge your phone.

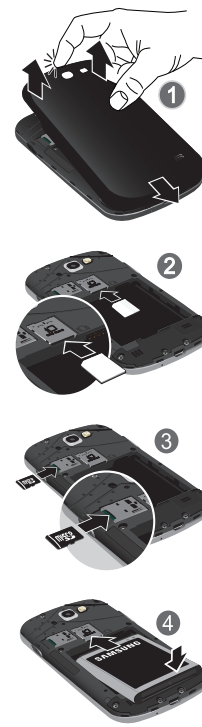

Touch screen

Navigating your phone

- Use your fingertip to lightly touch the screen.
- Use quick flicks of your finger on the touchscreen to swipe up, down, left, and right.
- To return to the previous screen, tap the ↶ key.
- Tap the **Home** key at any time to return to the main home screen.
- Tap **App tray** to access applications on your phone.
- To quickly search your device and Google™, tap and hold the **Search** key.

Notifications panel

The Notifications panel provides quick access to alerts including new messages, emails and software updates.

 
- Touch the top of the home screen and drag your finger down to see the Notifications panel.
- Swipe right to clear individual notifications or tap **Clear** to clear all.



Personalize

1. Tap and hold a blank space on one of the home screens and choose:


- **Set wallpaper:** Change your home screen and lock screen wallpaper.
- **Add to home screen:**
 - **Apps and widgets:** Add shortcuts and widgets for your favorite apps.
 - **Folder:** Organize app shortcuts into folders.
 - **Page:** Create additional home screens.

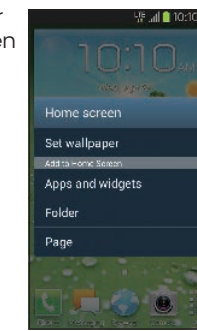

2. Tap the option you desire and follow instructions.

Organizing home screens

 
- To move a widget, shortcut or folder, tap and hold and drag it to a new location.
- To delete it, tap and hold and drag it to the trash bin

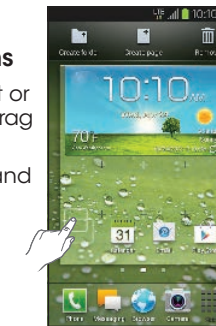

Calls and voicemail


Make a call

 1. From the home screen, tap **Phone**.
2. Select an option to place a call:
 - **Keypad:** Manually enter telephone number.
 - **Logs:** Return or retry a call.
 - **Favorites:** Frequent contacts.
 - **Contacts:** Call from your address book.

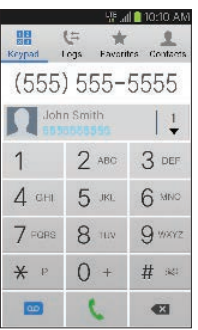

Check voicemail

 1. From the home screen, tap **Phone**.
2. Tap **Keypad**.
3. Tap **Voicemail** or tap and hold 1.

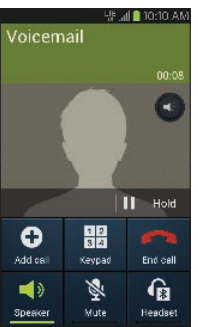

More information

On the web

Detailed support information, including device specifications, troubleshooting and FAQs are available in the support section of your carrier's website.

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your phone

 
Accessories

Your carrier offers a full line of accessories. For more information, go to your carrier's website or visit your carrier's local retailer.

Text and picture messaging


Send a text message

1. From the home screen, tap **Messaging**, then tap **New message**.
2. Enter a phone number or contact name in the **Enter recipient** field, or tap to select contacts from your address book.
3. Tap **Done** when finished.
4. Tap the **Enter message** field and enter your text.
5. Tap to send message.

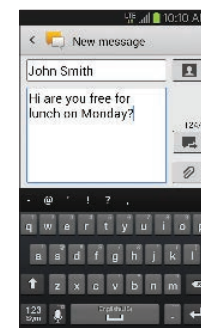

Send a picture message

 
1. Follow steps 1-4 above.
2. Tap
3. Tap **Images** and select desired image.
4. Tap to send message.

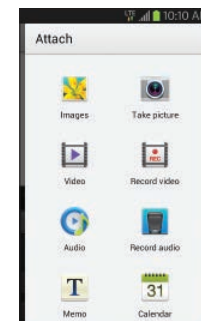

Email

Email setup (Gmail™, Yahoo®, etc.)

 
1. From the home screen, tap **Email**.
2. Enter email address and password and then tap **Next**.
3. Confirm email server settings and then tap **Next**.
4. Name the account, enter your name as it will appear on outgoing messages and then tap **Done**.

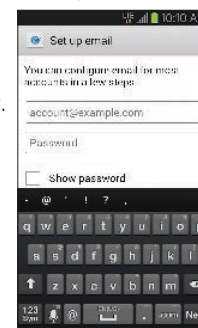

Note: To set up your corporate email, contact your IT administrator.

Create and send an email message

 1. From the home screen, tap **Email**.
2. To compose a new message, tap
3. Tap **To** field and enter email address or name.
4. Enter a subject and email message.
5. Tap
6. To attach files to the email message, tap and then follow the on-screen instructions.

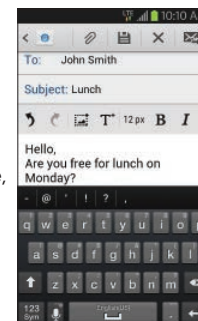

Browse the web

Access the internet

1. From the main home screen, tap **Browser**.
2. Tap the web address field, enter a URL, and tap **Go**.



Add Bookmark

1. With the desired page open, tap > **Save to bookmarks**.
2. Tap **OK** to save.

 
Navigation

- Flick the screen with your finger to scroll up or down.
- Spread two fingers apart on the screen to zoom in and pinch the screen with two fingers to zoom out.
- Tap a link to open it.
- Tap the ↶ key to go back a page.
- Tap to view bookmarks or open/close tabs.

Apps on Google Play

Access Google Play


1. From the home screen, tap **Play Store**.
2. Use your existing Google™ account or create one following the steps on the screen.

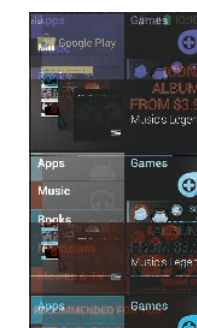

Navigate Google Play

From Play Store, you will have multiple ways to search for apps, games and more.

 
1. Tap a category to browse popular apps, games, movies and music organized by popularity or category.
2. Tap **Search** to search the Play Store for a specific game or app.
3. To install, tap the app and follow instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating the app in the App tray.

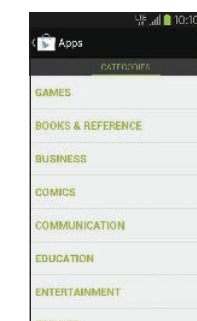

Camera and video

Take a picture

 1. From the home screen, tap **Camera**.
2. Tap **Capture** to take a photo.

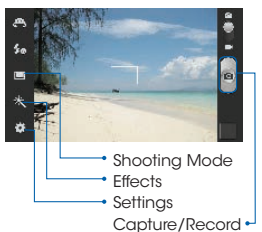

Take a video

1. From the home screen, tap **Camera**, then slide button in upper right hand corner to
2. Tap **Record** to start recording.
3. Tap **Stop** to end recording.

Send a picture

1. After taking the picture, tap **Image viewer** at the bottom right of the screen, then tap **Share** at the top of the screen.
2. Select desired option to send via messaging or email, Picasa, and more.

Create a slideshow

1. After taking more than one picture, tap **Image viewer** at the bottom right of the screen.
2. Tap the **Menu key**, tap **Slideshow**, then tap **Slideshow settings**.
3. Select the desired effect, music and speed, then tap **Start**.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID A3LSGH1437. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. © 2013 Samsung Telecommunications America, LLC. Samsung, Galaxy and Express are all trademarks of Samsung Electronics Co., Ltd. Screen images simulated. Appearance of device may vary.

