




Clear and Simple Quick Start Guide

Alcatel PIXI THEATRE™



Getting to know your Alcatel PIXI THEATRE™

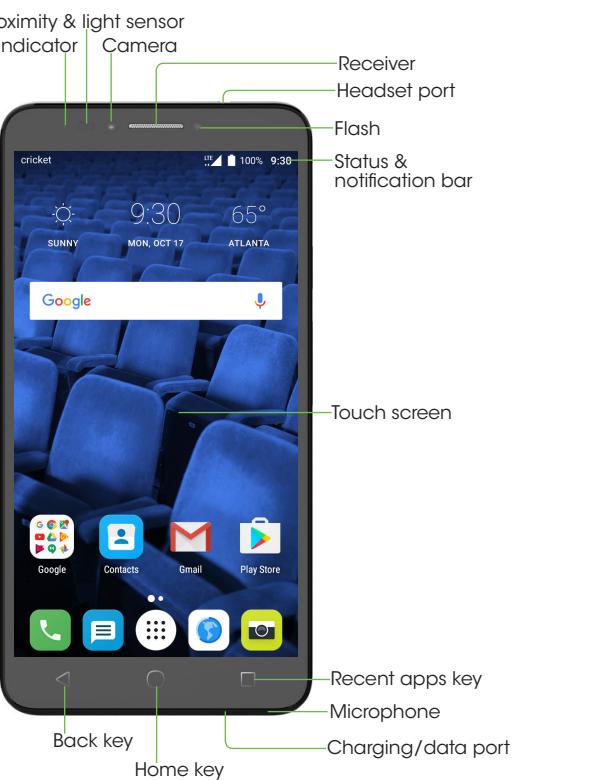

Warning!
To avoid damage to the phone, only use the SIM included in the box or provided to you by Cricket.

More information

On the web

Detailed support information, including device specifications and troubleshooting, is available at www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at 1-855-246-2461 or
- Dial 611 from your cell phone.

Accessories

For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines-FCC ID 2ACCJB061.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2016 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC logo is a trademark of SD-3C, LLC. You can also create your own custom beats with the ONETOUCH Mix app, which lets you mix both local and streaming tracks to store and share with your friends. ALCATEL is a trademark of Alcatel-Lucent and is used under license by TCL Communication Ltd. ©

Copyright 2016 TCL Communication Ltd reserves the right to alter material or technical specification without prior notice. All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NU TROPIC (Amar Kabouche).

 


CJB1FACALAAA

Printed in China

Phone setup

- Remove the back cover.




- To insert the SIM, turn the SIM card so the gold contacts faces downward.

- Slide the SIM card into the SIM slot.




- To insert a microSD card (sold separately), turn the microSD card so the gold contact face downward and slide it into the microSD slot.

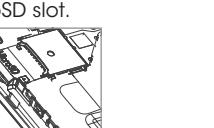

- Make sure that it is correctly inserted.

- To remove a SIM or microSD card, push in on the exposed edge to release the card and slide it out.

- Replace the back cover.

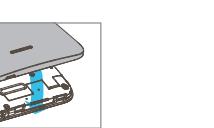


Email

Email setup (Gmail™, Yahoo!®, etc.)


- From the home screen, tap **Apps** ➤ **Email**.
- Select an account type, enter your email address and password, then tap **NEXT**.
- Confirm email account settings and tap **NEXT**.
- Name the account, enter your name which will be displayed on outgoing mails, and then tap **FINISH**.

Note: To set up corporate email, contact your IT administrator.

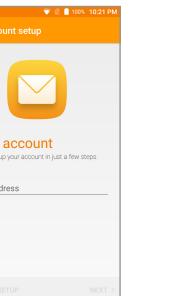

Create and send an email message

- From the home screen, tap **Apps** ➤ **Email**.
- To compose a new message, tap **Compose**.
- Tap the **To** field and enter email address or name or tap **Contacts** to access your contacts.
- Enter a subject and email message.
- To attach files to the email message, tap the **Paperclip** and make your selection.
- Tap **Send** to send the message.

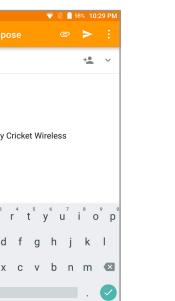

Cricket Apps & Services

These services make using Cricket even better and easier.



My Cricket: Check account balance, make a quick payment, view usage and access support from the palm of your hand.




Cricket Voicemail: Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.



Deezer: Listen on-the-go with ad-free streaming music, download your favorites to your phone and get customized playlists based on your preferences.




Cricket Wi-Fi Manager: Helps you save your high speed data by seeking out free and open Wi-Fi hotspots whenever you're near them. Also remembers your favorite Wi-Fi hotspots and connects you automatically. Cricket does the searching so you can do the saving.

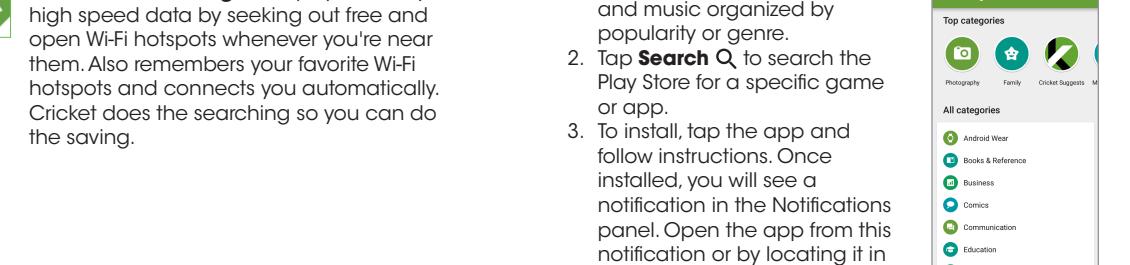

Touch screen

Navigating your phone

- Use your finger tip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- To return to the previous screen, tap the **Back key**.
- Tap the **Home key** at any time to return to the main home screen.
- Tap the **Recent apps key** to access recently viewed apps.
- Tap **Apps** to access applications on your phone.

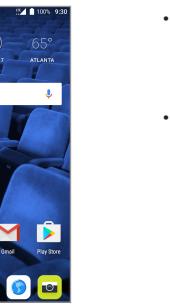

Notification panel

Access alerts, including new messages, emails, and software updates.

- Tap the top of the home screen and drag your finger down to see the Notifications panel.
- Swipe right or left to clear individual notifications or tap **Clear all** to clear all.
- With the notification panel open, tap the top of screen again and drag down to expand the quick settings menu.
- Tap **Settings** to access the settings menu.



Organize home screens


- To move widget or app shortcut, press and hold it and then drag it to a new location. To delete it, drag it to the **X Remove**.
- Press and hold an app shortcut and drag it on top of another. Then release to create a folder.
- To rename a folder, tap the folder title and then type a new name.

Apps on Google Play™

You can install apps from Google Play Store.

Access Google Play


- From the home screen, tap **Play Store**.
- Enter your existing Google account or create one following the steps on the screen.

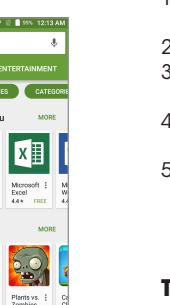


Navigate Google Play

From Play Store, there are multiple ways to find apps, games, and more.

- Tap a category to browse popular apps, games, movies, and music organized by popularity or genre.
- Tap **Search** to search the Play Store for a specific game or app.

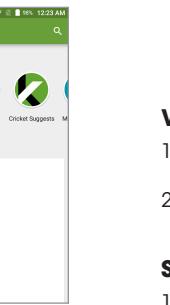

 - To install, tap the app and follow instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating it in the **Apps**.



Send a picture

- In **Gallery**, tap a picture and then tap **Share**.
- Choose to send via text messaging or email, and more.




Note: A Google Wallet™ payment method is required to purchase apps.

Personalize

Set wallpaper

- To change your home or lock screen wallpaper, press and hold a blank part of the home screen and tap **WALLPAPERS**.
- Select a wallpaper and tap **Set wallpaper**. Then, in the menu that pops up, select an option to set the wallpaper for your home screen, lock screen, or both. You can also tap **Pick image** for additional options.

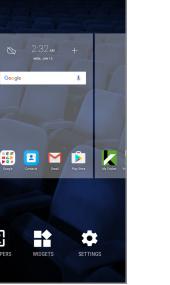

Add to home screen

- To add app shortcuts, tap **Apps**, press and hold the desired app, and drag it to the home screen.
- To add widgets, press and hold a blank part of the screen and tap **WIDGETS**, press and hold the desired widget and drag it to the home screen.




Check voicemail

- From the home screen, tap **Call**, then tap **Voicemail**.
- Press and hold **key 1**.



Call waiting

- Tap **5** or **On hold** to switch between active calls.
- Tap **1** to merge calls.
- Tap **2** to end a conference call.

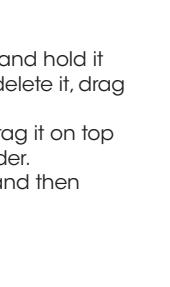

Unique Alcatel Features

Selfie

Take selfies quickly and easily. From the lock screen, double tap **Camera** to select different modes. Tap **Shutter button** or press either of the **Volume Keys** to take a photo.



Quick Silence

You can quickly mute an incoming call by simply turning over your phone. To activate this feature, tap **Settings** > **Gestures** and select **Turn over to mute**.




Double tap to turn on/off screen

When the screen is off, double tap to turn it on. When the screen is on, double tap a blank area on the home screen to turn it off. To activate this feature, tap **Settings** > **Gestures** and select **Unlock**.



Send a picture


- In **Gallery**, tap a picture and then tap **Share**.
- Choose to send via text messaging or email, and more.

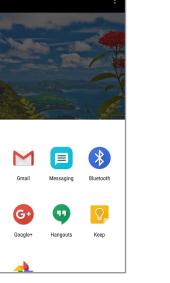


Calls and voicemail

Make a call

- From the home screen, tap **Call**.
- Type a name or phone number, or select one of the following options:

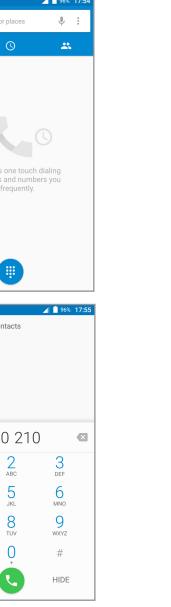


- Manually enter a phone number.
- Choose from frequently called or favorite contacts.
- Choose from a list of people who you have called or have recently called you.
- Make a call from your contact list.

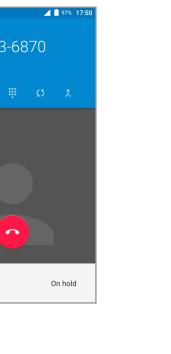

Text and picture messaging


Send a text message

- From the home screen, tap **Messaging**.
- Tap **New message** to start a new text message.
- In the **To** field, enter a number or a contact name or tap **Contacts**.
- Tap the **Send message** field and enter your message.
- Tap **Send** to send the message.

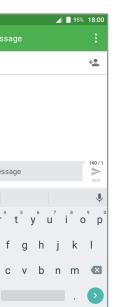

Send a picture message

- Follow steps 1-4 above.
- Tap the **Paperclip**.
- Tap **Pictures** and select desired picture or tap **Take a picture** to take a picture to attach.
- Tap **Send** to send the message.

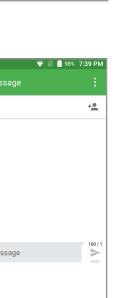


Onetouch Music

Onetouch Music is more than just a music player. Listen, stream and mix songs all through one app. Create playlists from songs you own and also listen to music from Deezer for Cricket.



Listening to music

- From the home screen, tap **Apps**.
- Tap **Music**.
- Tap a song in the music library to listen to or tap **Deezer** and then **Deezer** to log in to your Deezer account.

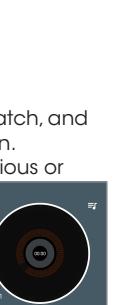

Mixing music

- Be the life of the party! DJ like a pro. Mix, scratch, and add effects to playlists at a touch of a button.
- Swipe left or right to advance to the previous or next track.
 - Move your finger back and forth on the turntable to scratch.
 - Tap Automix to turn on auto DJ features.
- Rotate your device to access advanced DJ mode.
- Tap the **AUTO/MANUAL** button to turn on manual mixing.
 - Tap **Effects** to add effects to the songs playing, move sliders to switch between tracks, adjust playing speed etc.
 - Tap **Record** to start recording, tap again to save the mixed song. For additional features, refer to the user manual.

