

Clear and Simple Quick start guide

Nokia Lumia 630



Tips:
Tap and hold the ← key to display recent apps. Tap and hold the Ⓜ key for voice commands using Cortana.

Phone setup

1. Remove back cover by pressing your thumb on the middle of the back cover and pulling up the top right corner of the back cover.
2. Insert SIM card by pushing the SIM into the card slot, with the gold color contacts facing down.
3. Insert memory card (sold separately) by pushing the card in to the memory card slot, with the gold color contacts facing down.
4. Insert battery, making sure the connectors align.
5. Replace back cover by aligning bottom of cover first and then snapping in place.
6. Charge phone.

Touch screen

- ### Navigating your phone
- To unlock the screen, press the power key on the side of the phone and swipe the screen up.
 - Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
 - Lightly touch the screen with your fingertip to select.
 - To return to the previous screen, tap the ⏪ key.
 - Tap the ☰ key at any time to return to the Start screen.
 - Swipe left to access the Apps list on your phone.
 - To quickly search your device and access Cortana, tap the Ⓜ key.

Start screen


Start screen tiles show missed calls and received messages.

Apps list

All your apps are listed here in alphabetical order.

Action Center

Access Action Center by swiping from top to bottom to see a summary of notifications and make quick changes to settings.

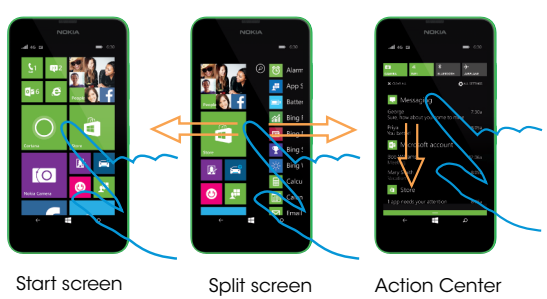

Personalize

Start screen

Pin anything you want to your Start screen: apps, contacts, favorite websites and more.

Pin a tile

1. Press and hold an app icon until the menu appears.
2. Tap **pin to start**. The app icon will move onto the Start screen.

Unpin a tile

1. Press and hold the tile until ✕ appears.
2. Tap ✕ to remove from the Start screen.

Move a tile

1. Press and hold the tile until it floats.
2. Drag it to a desired position.

Resize a tile

1. Press and hold the tile until ⏪, ⏩, or ↻ appears and tap it to resize.
2. The choices will be available when you attempt to change the tile size.




Add more Tiles to the Start screen

Change the Start screen from two columns to three columns.

1. From the Start screen, swipe down from the top of the screen, and tap **⚙ ALL SETTINGS**.
2. Tap **start+theme**, swipe down to "Show more Tiles" and turn it On.

Calls and voicemail

From the Start screen tap the ☎ tile to make calls, check voicemail and so much more.

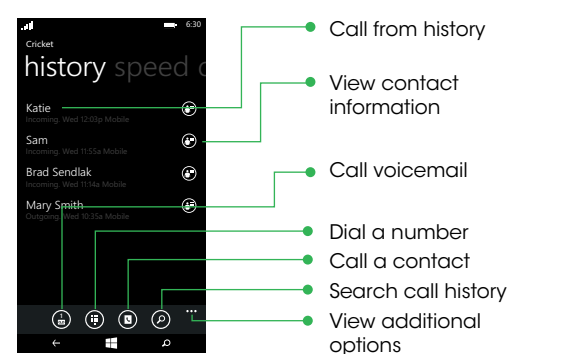

Check voicemail

Voicemail allows you to quickly listen to important voicemail messages.

1. From the Start screen, tap ☎.
2. Tap voicemail key Ⓜ and follow the prompts.

Use call waiting

Call waiting helps you answer or hold a call while you are on an existing call.

1. During a call, to hold the first call and answer the new call, tap **ANSWER**.
2. To end the first call and answer the new one, tap **end call+answer**.
3. To ignore the new call, tap **ignore**.


Copy Contacts

Use the app Transfer My Data for a quick and easy way to copy contacts from almost any device to your new Nokia Windows Phone.

Text and picture messaging

From the Start screen tap the ✉ tile to check or send messages.

To create a new message, tap ⊕ enter recipient, tap **type a text message** to reveal the keyboard to enter your message, tap 📎 to add a picture or other attachment, then tap Ⓜ to send your message.

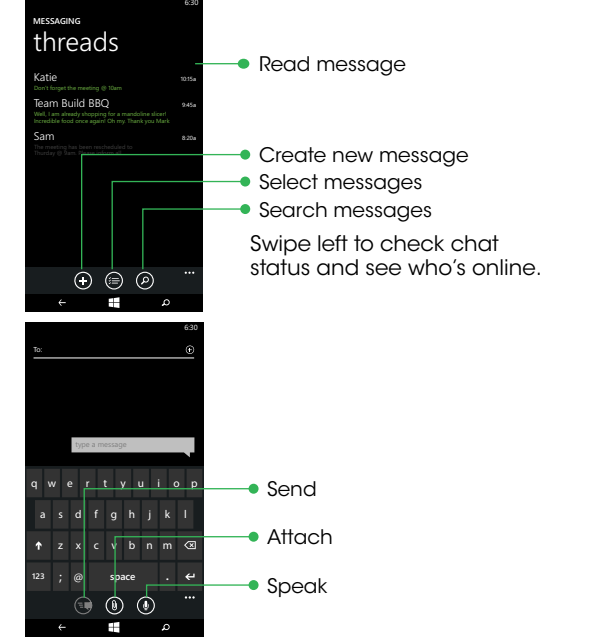


Word Flow Keyboard corrects and predicts words and with shape-writing eliminates the need to tap individual letters - just simply glide your finger over the keys.

Please don't text and drive.

Nokia Camera and video

Launch the camera app by tapping the Nokia Camera tile 📷 on the Start screen.

- Take a picture:** Tap 📷 to take a picture.
Shoot video: Tap 📹 to start recording. Tap ⏹ to stop recording.
Take a Smart Sequence: Tap 📷.

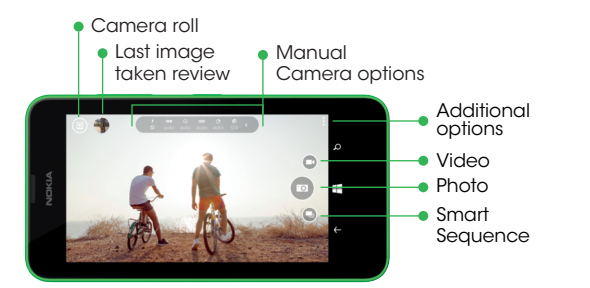

Check out additional Nokia Camera apps on this device such as Cinemagraph, and Creative Studio.

Tip: Save pictures and videos to your memory card to maximize storage on your device.

Start Background

You can add a background photo that displays through the tiles.

1. From the Start screen, swipe down from the top of the screen, and tap **⚙ ALL SETTINGS**.
2. Tap **start+theme > choose photo**.
3. Tap a photo, crop it as you like, and tap ✓.
4. Tap ☰ to see your photo on the Start screen.

More information

Setting up your phone is fast and easy. The Nokia Care app 📖 on your phone provides an on-device User Guide to assist with setup as well as tips and tricks, FAQs, and videos about your device.

Please also visit www.nokiasmartsetup.com. (For setup, you need to create a Windows Live ID)

On the web

Detailed support information including device specifications and troubleshooting are available at: www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your mobile phone

Accessories

For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID PDNRM-977. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. © 2014 Nokia. All rights reserved. © 2014 Cricket Wireless LLC. All rights reserved. Cricket is a trademark of Cricket Wireless LLC. Other marks are the property of their respective owners. © 2014 Microsoft Corporation. All rights reserved. Microsoft, Windows and the Windows logo are trademarks of the Microsoft group of companies.





Email

Email Setup (Gmail™, Yahoo®, etc.)

1. From the Apps list, scroll to and tap **⚙**, then tap **Email + accounts**
2. Tap ⊕ **add an account**.
3. Select an email account (i.e. Yahoo, Google, etc) and sign in with your account information.

Using Email

From the Start screen tap the ✉ **Email** tile to check, compose and send email messages.

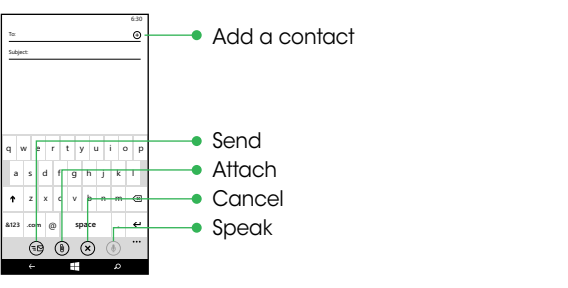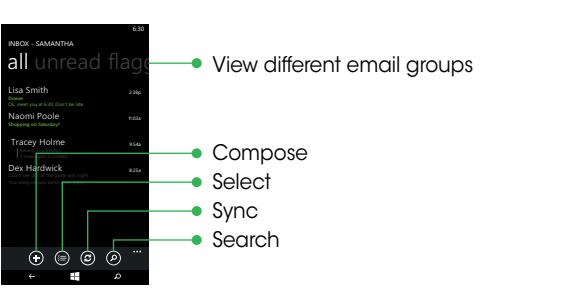

Note: To set up corporate email, contact your IT administrator.

Cricket services and Store

Cricket services

These services make using Cricket even better and easier!

My Cricket: Access billing, make quick payment, view usage and access support from the palm of your hand.

Cricket Wi-Fi: Automatically connect to free and open Wi-Fi hotspots, helping you to maximize data usage and enhance coverage.

Note: Upon initial activation of your device, a SMS will be sent to your device to assist you in downloading these apps from the Windows Store.

Store

Make your phone your own with more apps, games, and other items. Browse the Store to find the latest content for your phone. From the Start screen, tap **☰** or select Store **☰** from the App list.

Navigate Store

Swipe left to access the apps listed by category.

- ### Shop for an app
1. Tap **☰**. When you find an app or game you want, and tap it.
 2. If the app or game is free, tap Install or tap try to try it out or tap buy to purchase it.

Tip: Select the Storage Sense app to change the setting to store your music, photos, apps, and more on the memory card to maximize storage on your device.

Note: To get apps from Store or access more Microsoft services, you must sign in with your existing Microsoft account or create a Microsoft account.

Search and do with Cortana

Cortana is like a personal assistant, there to help you add something to your calendar, make a call, take a note, set alarms, find things and more.

Search


To find something with Cortana—just tap **Search** Ⓜ.

Talk to Cortana

To talk to Cortana hands-free, tap and hold **Ⓜ** from anywhere, then just say what you need. Not sure where to start? Say "What can I say?" to see some ideas.

Cortana Notebook

To see what Cortana knows about you such as interests, reminders, quiet hours, inner circle, and more, tap **☰** and then tap **☰**.

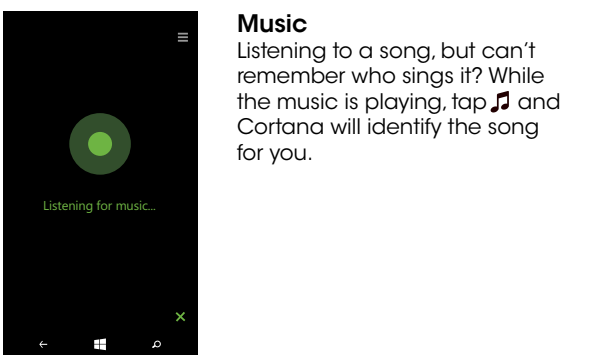

Music
Listening to a song, but can't remember who sings it? While the music is playing, tap **🎵** and Cortana will identify the song for you.

Note: You need a Microsoft account to use Cortana. This feature is not available in all languages. For info on the supported languages, go to www.windowsphone.com.

Settings

Storage Sense

To see what is taking up space on your phone, use the Storage Sense app.

1. From App list, tap **Storage Sense**.
2. Tap **phone** to check the details of the memory on your phone or tap **SD card**.
3. Provide options to change where you store music, photos, apps, and more.

Data Sense

To find more efficient ways to use mobile data and track your usage, use the Data Sense app. The Overview provides a status on data usage using cellular versus Wi-Fi.

1. From the App list, tap **Data Sense**.
2. Tap **set limit** and choose the values you want.
3. Swipe to the Usage screen to review cellular and WiFi usage by app.

Battery Saver

To conserve your battery and find details about how apps use your battery, use the Battery Saver app.

1. From the Apps list, tap **Battery Saver**.
2. Swipe to the Usage screen to see how apps use the battery.
3. To turn Battery Saver on, swipe to **Settings** and switch Battery Saver to **On**.
4. To change when Battery Saver starts conserving power, tap one of the options: When battery is low, Now until next charge, and Always.
5. Tap an app to change setting to allow the app to run in the background with Battery Saver on.

*Data charges apply.

Nokia apps

Nokia MixRadio*
Listen to the music you want to hear without interruption of ads—even offline. Nokia MixRadio personalizes mixes to suit your tastes. The more you listen, the more personal your listening experience becomes. Plus, you can add music that you own to playlists to create your own jukebox.

HERE Drive*
Get free*, turn-by-turn voice-guided navigation. Select your destination, get speed limit warnings, and find your way faster—even offline when you don't have a data connection.

Nokia Glam Me*
Fun, easy-to-use app for taking great self portraits with the main camera. You can also make adjustments to facial details and apply artistic effects.

OneDrive*
Easily to store and share photos, videos, and documents using the 7GB of free cloud storage with OneDrive.

Guía de inicio rápida, sencilla y clara

Nokia Lumia 630

Conoce tu teléfono Nokia Lumia 630



Tips: Consejos: mantén presionada la tecla ← para mostrar las últimas aplicaciones. Mantén presionada la tecla ⌂ para los comandos de voz con **Cortana**.

Más información

Configurar tu teléfono es una tarea rápida y sencilla. La aplicación Nokia Care **i** de tu teléfono ofrece una Guía de usuario incluida en el equipo, que sirve de ayuda para la configuración y brinda consejos y trucos, preguntas frecuentes y videos sobre el teléfono.

Visita www.nokiasmartsetup.com. (Para la configuración, debes crear una cuenta de Windows Live)

En Internet

Existe información detallada de ayuda, incluyendo especificaciones del teléfono y cómo resolver problemas básicos en:

www.cricketwireless.com/support/devices.

En el teléfono

- Llama al servicio al cliente de Cricket al **1-855-246-2461** o
- Llama al número **611** desde tu teléfono móvil

Accesorios

Para obtener más información sobre los accesorios, visita una tienda de Cricket de tu ciudad o www.cricketwireless.com/shop/accessories.

El producto cumple con las Pautas sobre la exposición a radio frecuencia de FCC—FCC ID PDNRM-977. Este teléfono cumple con la Parte 15 de las normas de FCC. Su uso está sujeto a las siguientes condiciones: (1) este teléfono no puede causar interferencias perjudiciales y (2) este teléfono debe aceptar cualquier interferencia recibida, incluidos aquellos que puedan provocar un funcionamiento no deseado. © 2014 Nokia. Todos los derechos reservados. © 2014 Cricket Wireless LLC. Todos los derechos reservados. Cricket es una marca registrada de Cricket Wireless LLC. El resto de los marcas son propiedad de sus respectivos dueños. © 2014 Microsoft Corporation. Todos los derechos reservados. Microsoft, Windows y el logotipo de Windows son marcas registradas del grupo de empresas Microsoft.



Configuración del teléfono

1. Retira la cubierta trasera, presionando el pulgar en el medio de ella y tirando hacia arriba la esquina superior derecha de la cubierta.
2. Inserta la tarjeta SIM, empujándola para insertarla en la ranura, con los contactos dorados hacia abajo.
3. Inserta la tarjeta de memoria (se vende por separado), empujándola hacia adentro en la ranura, con los contactos dorados hacia abajo.
4. Coloca la batería y fíjate que los conectores estén alineados.
5. Vuelve a colocar la cubierta trasera, alineando primero la parte inferior y luego encajándola en su lugar.
6. Carga el teléfono.



Pantalla táctil

Navegar por el teléfono

- Para desbloquear la pantalla, oprime la tecla de encendido ubicada al costado del teléfono y desliza el dedo hacia arriba por la pantalla.
- Desliza el dedo rápidamente sobre la pantalla táctil para moverla hacia arriba, hacia abajo, hacia la izquierda o derecha.
- Toca ligeramente la pantalla con tu dedo para seleccionar algo.
- Para volver a la pantalla anterior, toca ⏪.
- Toca **⌂** en cualquier momento para volver a la pantalla de inicio.
- Desliza el dedo hacia la izquierda para tener acceso a la lista de aplicaciones de tu teléfono.
- Para hacer búsquedas rápidas en tu teléfono y tener acceso a Cortana, toca **Ⓜ**.

Pantalla de inicio

Los mosaicos de la pantalla de Inicio muestran las llamadas perdidas y los mensajes recibidos.

Lista de aplicaciones

Todas tus aplicaciones aparecen aquí en orden alfabético.

Centro de actividades

Accede al Centro de actividades deslizando el dedo de arriba hacia abajo para ver un resumen de las notificaciones y para hacer cambios rápidos en la configuración.



Personalización

Pantalla de inicio

Fija lo que quieras en tu pantalla de Inicio: aplicaciones, contactos, sitios favoritos de internet, y más.

Fijar un mosaico

1. Mantén presionado el ícono de una aplicación, hasta que aparezca el menú.
2. Presiona sostenidamente el ícono de una aplicación hasta que aparezca el menú.

Desprender un mosaico

1. Presiona sostenidamente el mosaico hasta que aparezca **ⓧ**.
2. Toca **ⓧ** para quitarlo de la pantalla de inicio.

Mover un mosaico

1. Presiona sostenidamente el mosaico hasta que flote.
2. Arrástralo a la posición deseada.

Ajustar el tamaño de un mosaico

1. Presiona sostenidamente el mosaico hasta que aparezca **ⓧ**, **Ⓜ** o **Ⓝ** y tócala para ajustar el tamaño.
2. Las opciones aparecen cuando intentas cambiar el tamaño de un mosaico.



Agregar más mosaicos a la pantalla de Inicio

Cambia el diseño de la pantalla de Inicio, de dos columnas a tres.

1. Desde la pantalla de Inicio, desliza el dedo hacia abajo, desde la parte superior de la pantalla, y toca **⚙️ TODAS LAS CONFIGURACIONES**.
2. Toca **inicio+tema**, deslízate hasta "Mostrar más mosaicos" y actívalo.

Buscar y realizar acciones con Cortana

Cortana es como un asistente personal, está allí para ayudarte a agregar algo a tu calendario, hacer una llamada, tomar una nota, configurar alarmas, encontrar cosas, etc.

Buscar


Para buscar algo con Cortana, solo toca **Buscar** **Ⓜ**.

Talk to Cortana

Para hablar con Cortana sin utilizar las manos, mantén presionado **Ⓜ** desde cualquier lugar y solo di lo que necesitas. ¿No estás seguro de por dónde empezar? Di "Qué puedo decir" para ver algunas ideas.

Anotador de Cortana

Para ver lo que Cortana sabe sobre ti, como tus intereses, recordatorios, horas tranquilas, círculo de allegados y otras cosas, toca **Ⓜ** y luego toca **≡**.

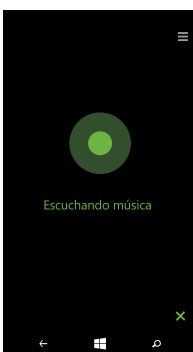

Música

¿Estás escuchando una canción, pero no recuerdas quién la canta? Mientras se reproduce la canción, toca **🎵** y Cortana identificará el tema musical.

Nota: necesitas tener una cuenta de Microsoft para usar Cortana. Esta función no está disponible para todos los idiomas. Para obtener más información sobre los idiomas compatibles, visita www.windowsphone.com.

Llamadas y correo de voz

En la pantalla de inicio, toca el mosaico **☎** para hacer llamadas, revisar tu correo de voz y mucho más.



Revisa el correo de voz

El correo de voz te permite escuchar rápidamente los mensajes de correo de voz importantes.

1. En la pantalla de inicio, toca **☎**.
2. Toca la tecla de correo de voz **📞** y sigue las indicaciones.

Uso de la llamada en espera

La llamada en espera sirve para responder una llamada, mientras se mantiene en espera la llamada actual.

1. Durante una llamada, para dejar en espera la primera llamada y responder la llamada nueva, toca **RESPONDER**.
2. Para finalizar la primera llamada y responder la llamada nueva, toca **finalizar llamada+responder**.
3. Para ignorar la nueva llamada, toca **ignorar**.

Copiar contactos

Usa la aplicación Transfer My Data para copiar los contactos de manera sencilla y rápida, desde casi cualquier equipo a tu nuevo Nokia Windows Phone.

Mensajes de texto y con fotos

En la pantalla de inicio, toca el mosaico **✉** para ver o enviar mensajes.

Para crear un nuevo mensaje, toca **+** e ingresa el destinatario, toca **Escribir mensaje de texto** para que aparezca el teclado y puedas escribir el mensaje, toca **📎** para agregar una imagen u otro documento adjunto y luego toca **📧** para enviar el mensaje.



Word Flow Keyboard corrige y predice las palabras, y, con este sistema que va dibujando formas, se elimina la necesidad de tocar cada letra por separado. Solo desliza el dedo sobre las teclas.

No envíes mensajes de texto mientras conduces.

Aplicaciones de Nokia




Nokia MixRadio*

Escucha la música que deseas sin la interrupción de los comerciales, incluso cuando no estés conectado a Internet. Nokia MixRadio personaliza las listas de reproducción para satisfacer tus gustos. Cuanta más música escuches, más personalizada será tu experiencia de escuchar música. Además, puedes agregar música tuya a las listas de reproducción para crear tu propio tocadiscos virtual.




HERE Drive*

Obtén navegación guiada por voz, paso a paso, gratuita*. Selecciona tu destino, recibe advertencias de límite de velocidad y encuentra el camino con mayor rapidez, incluso, sin conexión a Internet, cuando no tengas un plan de datos.



Nokia Glam Me*

Una aplicación divertida y fácil de usar para tomar fotos de uno mismo con la cámara principal. También puedes hacer ajustes para detalles de la cara y para aplicar efectos artísticos.



OneDrive*

Almacena y comparte fotos, videos y documentos de manera sencilla, con el almacenamiento en la nube de 7 GB de OneDrive.

*Se cobran cargos de datos.

Cámara y video de Nokia

Inicia la aplicación de cámara de Nokia tocando el mosaico Cámara de Nokia **📷** en la pantalla de Inicio.

Tomar una fotografía: toca **📷** para tomar una fotografía.

Filmar un video: toca **📹** para comenzar a grabar. Toca **📷** para dejar de grabar.

Hacer una secuencia inteligente: toca **📷**.



Mira las aplicaciones adicionales para la Cámara de Nokia de este teléfono, como Cinemagraph y Creative Studio.

Consejo: guarda las fotografías y los videos en tu tarjeta de memoria para maximizar la capacidad de almacenamiento de tu teléfono.

Imagen de fondo en la pantalla de Inicio

Puedes agregar una imagen de fondo que se vea a través de los mosaicos.

1. Desde la pantalla de Inicio, desliza el dedo hacia abajo, desde la parte superior de la pantalla, y toca **⚙️ TODAS LAS CONFIGURACIONES**.
2. Toca **inicio+tema > seleccionar foto**.
3. Toca una foto, córtala del tamaño deseado y toca **👍**.
4. Toca **📷** para ver tu foto en la pantalla de Inicio.