



Clear and Simple Quick Start Guide




Getting to know your ZTE Grand X



Phone setup


1. Remove back cover. Insert micro-SIM with the cut corner facing in and the gold-colored contacts facing down.
2. Insert microSDHC™ card (not included) with gold-colored contacts facing down.
3. Insert battery, making sure the connectors align.
4. Replace back cover and charge your phone.

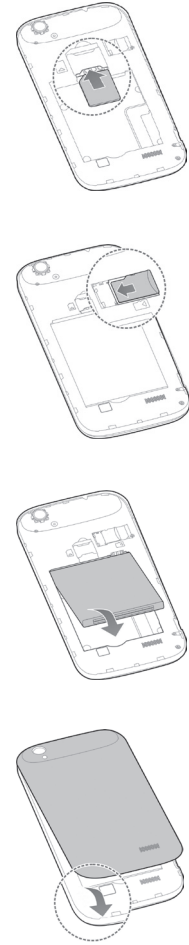

Touch screen

Navigating your phone

- Use your fingertip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- To return to the previous screen, tap the **Back key**.
- Tap the **Home key** at any time to return to the main home screen. Press and hold to use Google Search.
- Tap the **Menu key** to access menu options for the screen you are on. Press and hold to access your recent apps.
- Tap the **App tray** to access applications on your phone.

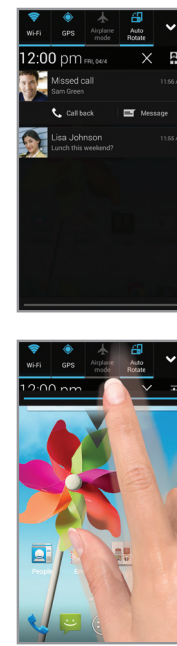


Notifications panel

- The Notifications panel provides quick access to alerts including new messages, emails, and software updates.
- Tap the top of the home screen and drag your finger down to see the Notifications panel.
 - Swipe right to clear individual notifications or tap **Remove** to clear all.

Personalize


Set wallpaper

- To change your home or lock screen wallpaper, press and hold a blank part of the home screen and follow on-screen instructions.

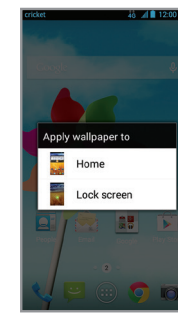

Add to home screen

- Tap **App tray** and then choose apps or widgets.
- Press and hold the icon of the item you wish to add and then drag it to a home screen.

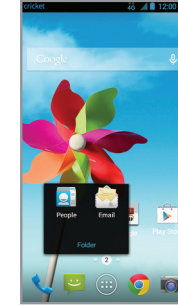

Organizing home screens

- Press and hold an icon and drag it to **Folder**. To keep your stuff together just how you like, drag additional icons to add them to an existing folder.

- To rename a folder, tap it and then tap the name to bring up the keyboard.

Create new home screens

- From the home screen, pinch two fingers quickly together. Tap **Plus** on the blank screen.


Access recently viewed apps

- Press and hold the **Menu key**.

Calls and voicemail


Make a call

1. From the home screen, tap **Phone**.
2. Select an option to place a call:
 - **Phone:** Manually enter telephone number.
 - **Call log:** Return or retry a call.
 - **Favorites:** Frequent and favorite contacts.

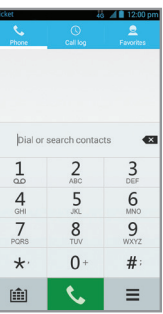

Check voicemail

1. From the home screen, tap **Phone**.
2. Press and hold the **1 key**.

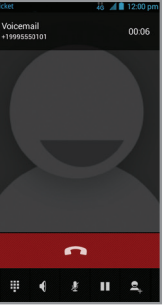

Use call waiting

Call waiting helps you answer or hold a call while you are on an existing call.

1. While on a call, you will hear a tone if another call comes in.
2. Answer the new call. Your current call will automatically be placed on hold.
3. Tap **Switch** to switch between active calls.

More information

On the web

Detailed support information, including device specifications, troubleshooting, and FAQs, is available at www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your phone.

Accessories

For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID SRQ-Z777. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. © 2014 Cricket Wireless LLC. All rights reserved. Cricket is a trademark of Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC logo is a trademark of SD-3C, LLC. Qualcomm® and Snapdragon™ are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.




© 2014 ZTE CORPORATION. All rights reserved. No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation. The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Text and picture messaging


Send a text message

1. From the home screen, tap **Messaging**.
2. Tap **Compose** to start a new text message.
3. In the **To** field, enter a number or a contact name or tap **Contacts** to access your contacts.
4. Tap the **Type message** field and enter your message.
5. Tap **Send** to send the message.

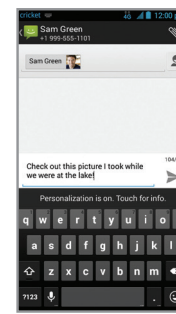

Send a picture message



1. Follow steps 1-4 above.
2. Tap the **Paperclip**.
3. Tap **Pictures** and select desired picture.
4. Tap **Send** to send the message.

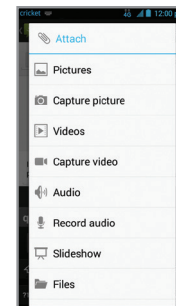

Email

Email setup (Gmail™, Yahoo!®, etc.)

1. From the home screen, tap **Email**.
2. Enter email address and password and then tap **Next**.
3. Confirm email account settings and tap **Next**.
4. Name the account, enter your name as it will appear on outgoing messages, and tap **Next**. Your email will begin to synchronize with your phone.

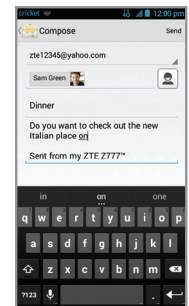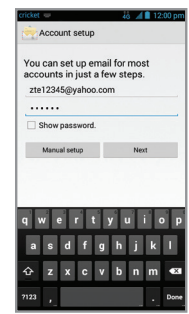

Note: To set up corporate email, contact your IT administrator.

Create and send an email message

1. From the home screen, tap **Email**.
2. To compose a new message, tap **Compose**.
3. Tap the **To** field and enter email address or name.
4. Enter a subject and email message.
5. To attach files to the email message, tap the **Menu key** > **Attach file**, and make your selection.
6. Tap **Send** to send message.

Cricket services

These services make using Cricket even better and easier!

My Cricket: Access billing, make a quick payment, view usage and access support from the palm of your hand.

Cricket Wi-Fi: Automatically connect to free and open Wi-Fi® hotspots, helping you to maximize data usage and enhance coverage.

Cricket Voicemail: Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.


To update and use apps

1. From the main home screen, tap **Play Store**.
2. Tap the **Menu key**, and then tap **My apps**.
3. Tap the name of the app and then tap **UPDATE**.
4. Tap **Accept**.
5. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating the app in the **App tray**.

Apps on Google Play™

Access Google Play


1. From the home screen, tap **Play Store**.
2. Enter your existing Google™ account or create one following the steps on the screen.

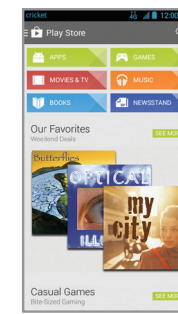

Navigate Google Play

From Play Store, you will have multiple ways to search for apps, games, and more.

1. Tap a category to browse popular apps, games, movies, and music organized by popularity or category.
2. Tap **Search** to search the Play Store for a specific game or app.
3. To install, tap the app and follow instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating the app in the **App tray**.

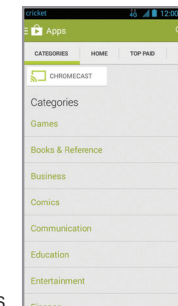

Camera and video

Take a picture

1. From the home screen, tap **Camera**.
2. Tap **Settings** to adjust your camera settings. To zoom in or out press a **Volume Key** or pinch/spread two fingers on the screen.
3. Tap the **Shutter button** to take a photo.



View pictures

1. From the home screen, tap the **App tray**.
2. Tap **Gallery**.




Take a video

1. In camera mode, drag the **Camera/camcorder slider** to switch to the camcorder.
2. Tap **Start recording** to start and tap **Stop recording** to stop recording video.

Send a picture


1. After taking a picture, tap the thumbnail in the corner of the screen and then tap **Share**.
2. Scroll through options to send via text messaging or email, Facebook®, and more.

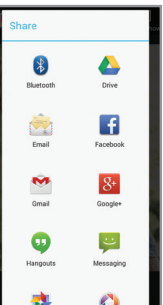

Note: A Google Wallet™ payment method is required to purchase apps.

Cambio de idioma

- Desde la pantalla principal, toca el **Botón de menú**.
- Toca **System settings (Configuración del sistema)** > **Language & input (Teclado e idioma)**.
- Toca **Language (Idioma)**.
- Toca el idioma que desearías usar.




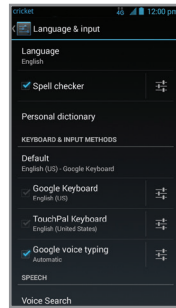


Conoce tu ZTE Grand X



Ajuste del teléfono


- Quita la tapa de atrás. Inserta la tarjeta micro-SIM con la esquina cortada hacia adentro y los contactos dorados orientados hacia abajo.
- Inserta la tarjeta microSDHC™ (no incluida) con los contactos dorados orientados hacia abajo.
- Inserta la batería, y asegúrate de que los conectores estén alineados.
- Vuelve a colocar la tapa y carga tu teléfono.

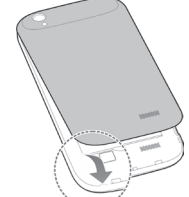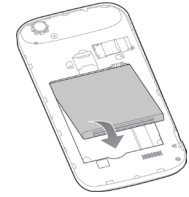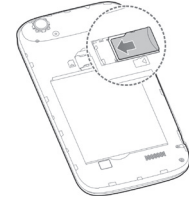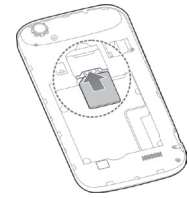

Pantalla táctil

Para navegar en tu teléfono

- Usa la punta de tus dedos para tocar ligeramente la pantalla.
- Da golpecitos rápidos con tus dedos en la pantalla táctil para deslizarte hacia arriba, abajo, izquierda y derecha.
- Para regresar a la pantalla anterior, toca el **Botón de retroceso**.
- Toca el **Botón de inicio** en cualquier momento para regresar a la pantalla principal. Toca por unos segundos para usar Google Search.
- Toca el **Botón de menú** para tener acceso a las opciones del menú para la pantalla en la que te encuentras. Toca por unos segundos para tener acceso a tus aplicaciones más recientes.
- Toca la **Bandeja de aplicaciones** para tener acceso a las aplicaciones en tu teléfono.

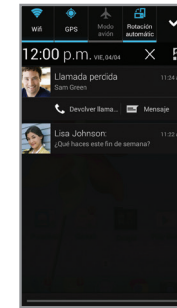


Panel de notificaciones

- El panel de notificaciones te proporciona acceso rápido a alertas, que incluyen mensajes, correos electrónicos y actualizaciones de software.
- Toca la parte superior de la pantalla principal y arrastra tu dedo hacia abajo para ver el panel de notificaciones.
 - Desliza a la derecha para eliminar notificaciones individuales o toca **Eliminar** para eliminarlas todas.

Personalización

Para establecer el fondo de pantalla

- Para cambiar el fondo de pantalla de la pantalla principal o de bloqueo, oprime por unos segundos la parte en blanco de la pantalla principal y sigue las instrucciones de la pantalla.

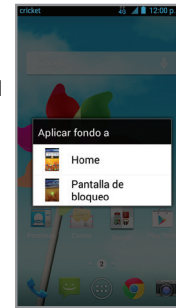

Añadir a la pantalla principal

- Toca **Bandeja de aplicaciones** y luego elige aplicaciones o widgets.
- Toca por unos segundos el icono del elemento que deseas agregar y luego arrástralo hasta la pantalla principal.
- Para mover un icono, oprime por unos segundos y arrástralo hasta su nueva ubicación. Para eliminarlo, arrástralo hasta **Eliminar**.



Organizar las pantallas principales

- Oprime por unos segundos un icono y arrástralo a una **carpeta**. Para mantener tus cosas juntas como quieres, arrastra iconos y agrégalos a una carpeta existente.
- Para cambiar el nombre a una carpeta, tócala y luego toca el nombre para que aparezca el teclado.

Para crear nuevas pantallas principales

- Desde la pantalla principal, junta rápidamente dos dedos. Toca el símbolo de **Más** en la pantalla en blanco.


Ten acceso a tus aplicaciones más recientes

- Toca por unos segundos el **Botón de menú**.

Llamadas y correo de voz

Para hacer una llamada

- Desde la pantalla principal, toca **Teléfono**.
- Elige una opción para hacer una llamada:
 - Teléfono:** ingresa manualmente un número telefónico.
 - Llamadas:** devuelve o reintenta una llamada.
 - Favoritos:** contactos frecuentes y favoritos.

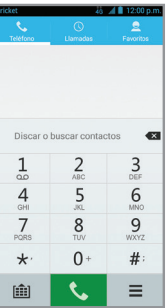

Para revisar el correo de voz

- Desde la pantalla principal, toca **Teléfono**.
- Toca por unos segundos el **Botón de 1**.



Uso de la llamada en espera

La llamada en espera te ayuda a contestar o poner una llamada en espera mientras estás en otra llamada.

- Cuando estés conversando en el teléfono, escucharás un tono en caso de que entre otra llamada.
- Contesta la nueva llamada. Tu llamada actual se colocará automáticamente en espera.
- Toca **OK** para pasar de una llamada a otra.

Cámara y video

Para tomar una fotografía

- Desde la pantalla principal, toca **Cámara**.
- Toca **Configuración** para ajustar la configuración de tu cámara. Oprime el **Botón de volumen** para acercarse o alejarse de una imagen, o junta o separa dos dedos en la pantalla.
- Toca el **Botón obturador** para tomar una foto.




Para ver las imágenes

- Desde la pantalla principal, toca la **Bandeja de aplicaciones**.
- Toca **Galería**.
- En el modo de cámara, arrastra **Cámara/videograbación** para cambiar a la cámara de video.
- Toca **Empezar grabación** para comenzar y toca **Parar grabación** para detener la grabación.



Para enviar una fotografía

- Después de tomar una fotografía, toca la vista en miniatura en la esquina de la pantalla, y luego toca **Compartir**.
- Desplázate por las opciones para enviarla por mensaje de texto o correo electrónico, Facebook®, y más.

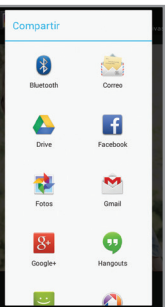

Más información

En Internet

La información detallada de ayuda, incluyendo las especificaciones del teléfono, solución de problemas y las preguntas frecuentes se encuentran disponibles en www.cricketwireless.com/support/devices.

En el teléfono

- Llama al servicio al cliente al **1-855-246-2461** o
- Marca **611** desde tu teléfono.

Accesorios

Para más información con respecto a los accesorios, visita la tienda local de Cricket o dirígete a www.cricketwireless.com/shop/accessories.



Importante: los inventarios de la tienda y por Internet pueden variar.

El producto cumple con los Lineamientos sobre la Exposición a Radiofrecuencia de FCC ID SRQ-Z777. Este teléfono cumple con la Parte 15 de las Reglas de FCC. La operación está sujeta a las siguientes dos condiciones: (1) este teléfono no puede ocasionar interferencia perjudicial, y (2) este teléfono debe aceptar cualquier interferencia recibida, incluyendo interferencia que pueda causar una operación no deseada. © 2014 Cricket Wireless LLC. Todos los derechos reservados. Cricket es una marca de Cricket Wireless LLC. Las demás marcas son propiedad de sus respectivos propietarios. El logotipo de microSDHC es una marca de SD-3C, LLC. Qualcomm® y Snapdragon™ son marcas comerciales de Qualcomm Incorporated, registradas en Estados Unidos y en otros países. Utilizado con permiso.




© 2014 ZTE CORPORATION. Todos los derechos reservados. No se puede extraer, reproducir, traducir ni utilizar ninguna parte de esta publicación de ninguna forma ni por ningún medio, electrónico ni mecánico, incluyendo las fotocopias y el microfilm, sin el permiso previo de ZTE Corporation. El manual es publicado por ZTE Corporation. Nos reservamos el derecho de hacer modificaciones en los errores impresos o actualizar especificaciones sin aviso previo.

Mensajes de texto y con fotos


Para enviar un mensaje de texto

- Desde la pantalla principal, toca **Mensajería**.
- Toca **Redactar** para comenzar un nuevo mensaje de texto.
- En el campo **Para**, ingresa un número o el nombre de un contacto, o toca **Todos** para tener acceso a tus contactos.
- Toca el campo **Escribir mensaje** e ingresa tu mensaje.
- Toca **Enviar** para enviar el mensaje.

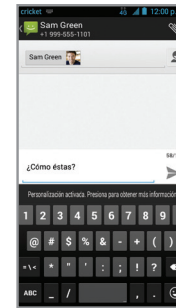

Para enviar una imagen

- Sigue los pasos del 1 al 4 descritos arriba.
- Toca el **Clip**.
- Toca **Imágenes** y selecciona la fotografía deseada.
- Toca **Enviar** para enviar el mensaje.

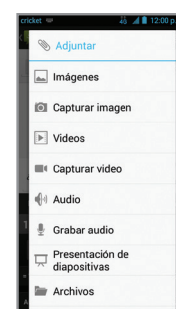

Correo electrónico

Configuración de correo electrónico (Gmail™, Yahoo!®, etc.)


- Desde la pantalla principal, toca **Correo**.
- Ingresa la dirección de correo electrónico y la contraseña y luego toca **Siguiente**.
- Confirma la configuración de la cuenta de correo electrónico y toca **Siguiente**.
- Nombra la cuenta, escribe tu nombre como aparecerá en tus mensajes enviados y luego toca **Siguiente**. Tu correo electrónico empezará a sincronizarse con tu teléfono.



Nota: para establecer un correo electrónico corporativo, comunícate con tu administrador de informática.

Para crear y enviar un mensaje de correo electrónico

- Desde la pantalla principal, toca **Correo**.
- Para escribir un mensaje nuevo, toca **Redactar**.
- Toca el campo de **Para** e ingresa una dirección de correo electrónico o un nombre.
- Ingresa un asunto y el mensaje de correo electrónico.
- Para agregar archivos al mensaje de correo electrónico, toca el **Botón de menú** > **Adjuntar un archivo**, y selecciona un archivo.
- Toca **Enviar** para enviar el mensaje.

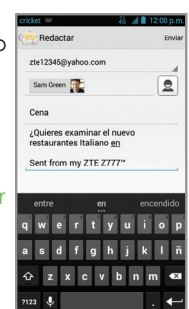

No envíes mensajes de texto al momento de conducir.

Nota: se requiere un método de pago Google Wallet™ para comprar aplicaciones.